

Standard Operating Instruction Sheet For use of Avdata Standpipe Filling System



Typical Control Panel

Use of keys and control panel

1. Touch access key against the read head on the top left corner of the control panel.
2. If the key is valid for use at this water point (and, in the case of a prepay key, has sufficient credit) then the **SELECT OUTLET** indicator will be lit.
3. Press the ON button for the desired water outlet.
4. Press the OFF button when finished (or others may access the water at the expense of this user).
5. To avoid wastage, access will be stopped after 25,000 litres of water has been delivered or if there has been no flow detected for 3 minutes. If this happens, begin again at **Step 1**.

For prepay keys only:

- **SELECT OUTLET** indicator will flash when remaining prepaid credit is 1,000 litres or less.
- **If prepaid credit limit is reached then water flow will be switched off and the NOT VALID Indicator will be lit. No further access to water will be allowed until key is recharged.**

During use “**SELECT OUTLET**” flashing means the prepay key that is currently in use is low in credit (1000 litres or less remaining).